



Directly marketed products from own development and production with creation of value in Austria



# UNI-Line <sup>®</sup> Implementation instructions


Development, production and marketing:	M2 Consulting GmbH
Address:	Karling 97, 4081 Hartkirchen
Company data:	ATU 64444104, FN 317280 p
Management:	Hannes Meier
Contact data:	M +43 664 2005455, F +43 732 210022 2631 E <u>office@m2consulting.at</u>
Banking data:	Raiffeisenbank Region Eferding
Banking account:	IBAN: AT77 3418 0800 0144 1435, BIC: RZOOAT2L180
ARA licence number:	19477



UNI-Line ®

# Example "tree's ring"

Tree's ring

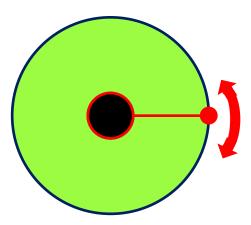

Take a cord with the length of your tree's ring radius plus circumference of your tree, clipse cord around the tree keeping it moveable.


Clipse a wooden stick on the end of the cord, move around the tree and create a marking on the bottom. Then start again with digging ...

... dig – implement – ready!





### **Example "Straight Line"**

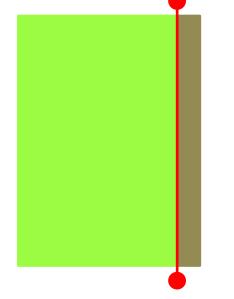

Strain a cord along your straight line, dig along with a straight digging tool (i.e. Gardena Digger) and widen up slightly the diggings done.



**Tip:** for uneven garden areas see last slide! Keep any stitch as small as possible (don't widen up too much). If possible then provide a slight tension on both ends of UNI-Line (valid for lengths up to 2 m).





#### **Implementation example**



Implement your lawn edge in a way to keep it outside bottom maximally on cutting lenght of your grass. This will guarantee also that it will nearly optically "disappear" after some few weeks.



**Tip:** keep a small slope from your lawn down to the separated area (stones, mulch, etc.).






## Example "patch up"

When patching up two different lawn edges then keep an overlapping area of ca. 20 cm.



**Tip:** cut one edge top down in a ca. 45 ° angle, the other bottom up in the same way! This will guarantee good implementation over time and is not creating a double edging area!

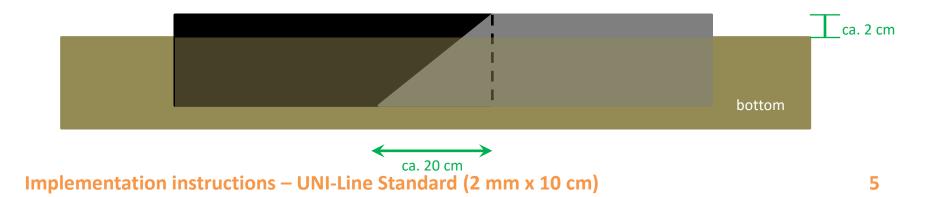






#### Example "unevennesses"

Just cut in your edge bottom up for ca. 8-9 cm, then bend it up- or downwards and keep it in line with your garden area.

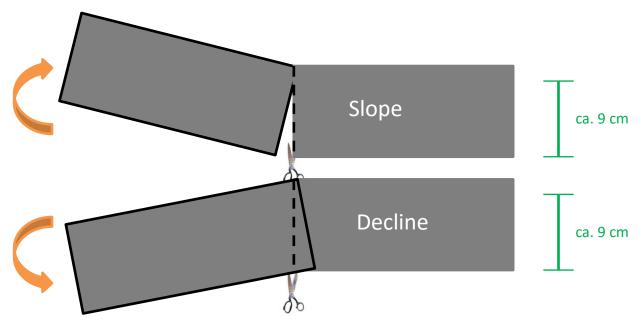

Implementation instructions – UNI-Line Standard (2 mm x 10 cm)